


Replacement of TFP Collector Media

Model Series: ME500, ME800, ME2000, ME2500, ME4000, ME6000

Procedure

1. Open the TFP-Eliminator and loosen the clamping frame.
2. Remove TFP Collector cell from the TFP-Eliminator.
3. Remove and discard foam collector blocks from TFP Collector cell.
4. Clean empty TFP Collector cell.
5. Install new foam collector blocks taking care to orient all blocks with the alignment hole in the same position. (see illustration)
6. Place the TFP Collector cell back in the unit and clamp in place.

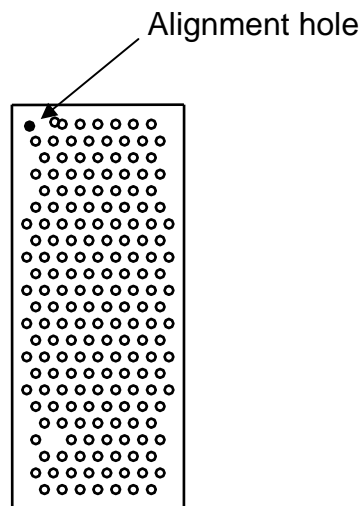

Contact Information

Nutech Brands Inc.

Industrial Products group

Phone (519) 457-1904, Fax (519) 457-1676, email: tfptech@tfp-eliminator.com